




1. TOOLS REQUIRED:
Flat screwdriver and 10mm socket wrench.

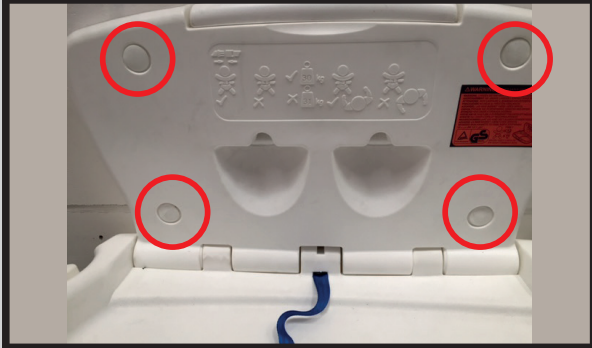


2. Remove the four corner caps to expose the 10mm bolts.



3. Remove the four bolts.



4. Place the baby minder on the workbench upside down.

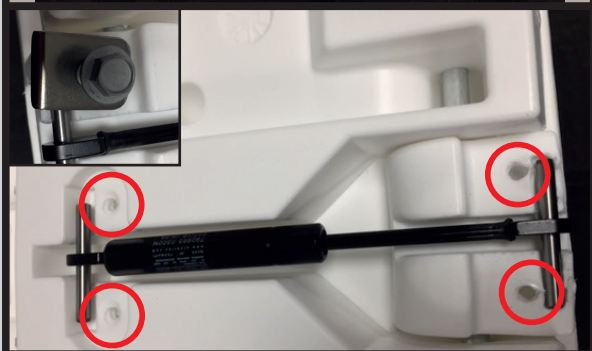

5. Using a 10mm socket wrench remove the 4 bolts that hold the gas strut in place.

6. Replace the gas strut with a new one. Using the pins, washers and brackets from the old strut replace in the reverse order of disassembly.

BABYMINDER®

USER GUIDE - GAS STRUT REPLACEMENT